


Key to Part Designations

A - Battery	M ² - Parking Light, right
B - Starting Motor	N - Ignition Distributor
C - Generator	O - Ignition Coil
D - Ignition Switch	P ¹ - Spark Plug Connector for Cylinder 1
E - Windshield Wiper Switch	P ² - Spark Plug Connector for Cylinder 2
F - Lighting Switch	P ³ - Spark Plug Connector for Cylinder 3
G ¹ - Direction Indicator Switch	P ⁴ - Spark Plug Connector for Cylinder 4
H ¹ - Horn Button	Q ¹ - Spark Plug for Cylinder 1
H ² - Horn	Q ² - Spark Plug for Cylinder 2
J ¹ - Dimmer Switch	Q ³ - Spark Plug for Cylinder 3
J ³ - Stop Light Switch	Q ⁴ - Spark Plug for Cylinder 4
J ⁴ - Oil Pressure Switch	R** - Clock
J ⁵ - Switch for Interior Light	S - Fuse Box
K ¹ - Headlamp Warning Light	U ¹ - Direction Indicator, left
K ² - Generator and Cooling Warning Light	U ² - Direction Indicator, right
K ³ - Direction Indicator Warning Light	W - Windshield Wiper Motor
K ⁴ - Oil Pressure Warning Light	X ¹ - Stop/Tail Light, left
K ⁵ - Speedometer Light	X ² - Stop/Tail Light, right
K ^{6**} - Clock Light	Y ¹ - Interior Light, front
L ¹ - Two-Filament Bulb, left	Y ² - Interior Light, rear
L ² - Two-Filament Bulb, right	Z - License Plate Light
M ¹ - Parking Light, left	

** For Micro Bus De Luxe only

Wiring Diagram and Fuses

Fuses

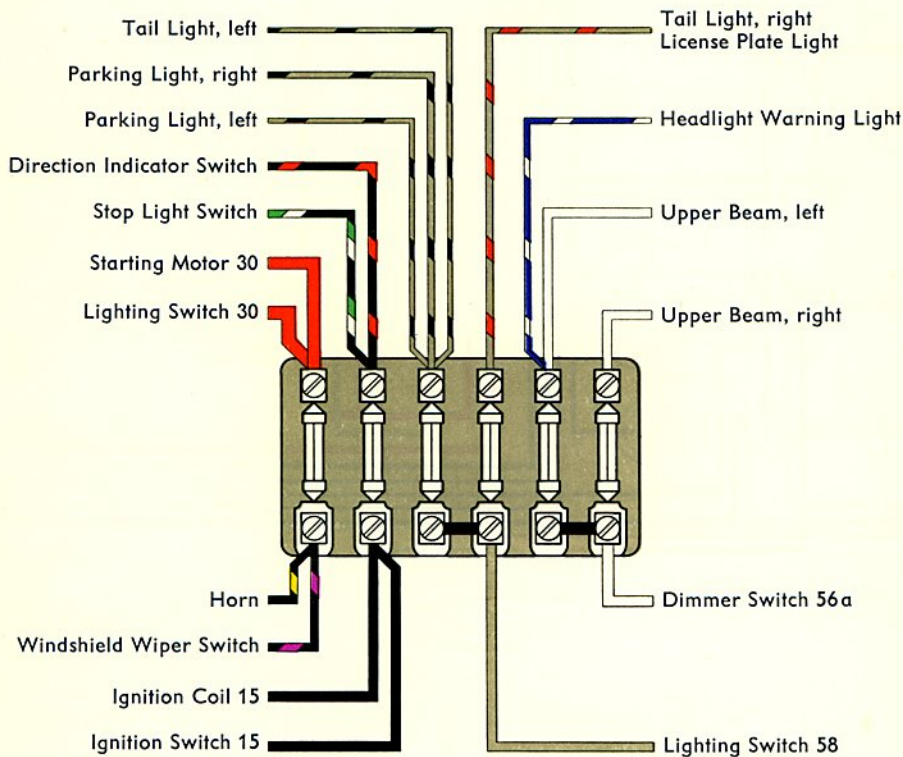

Fuse Box below instrument panel