


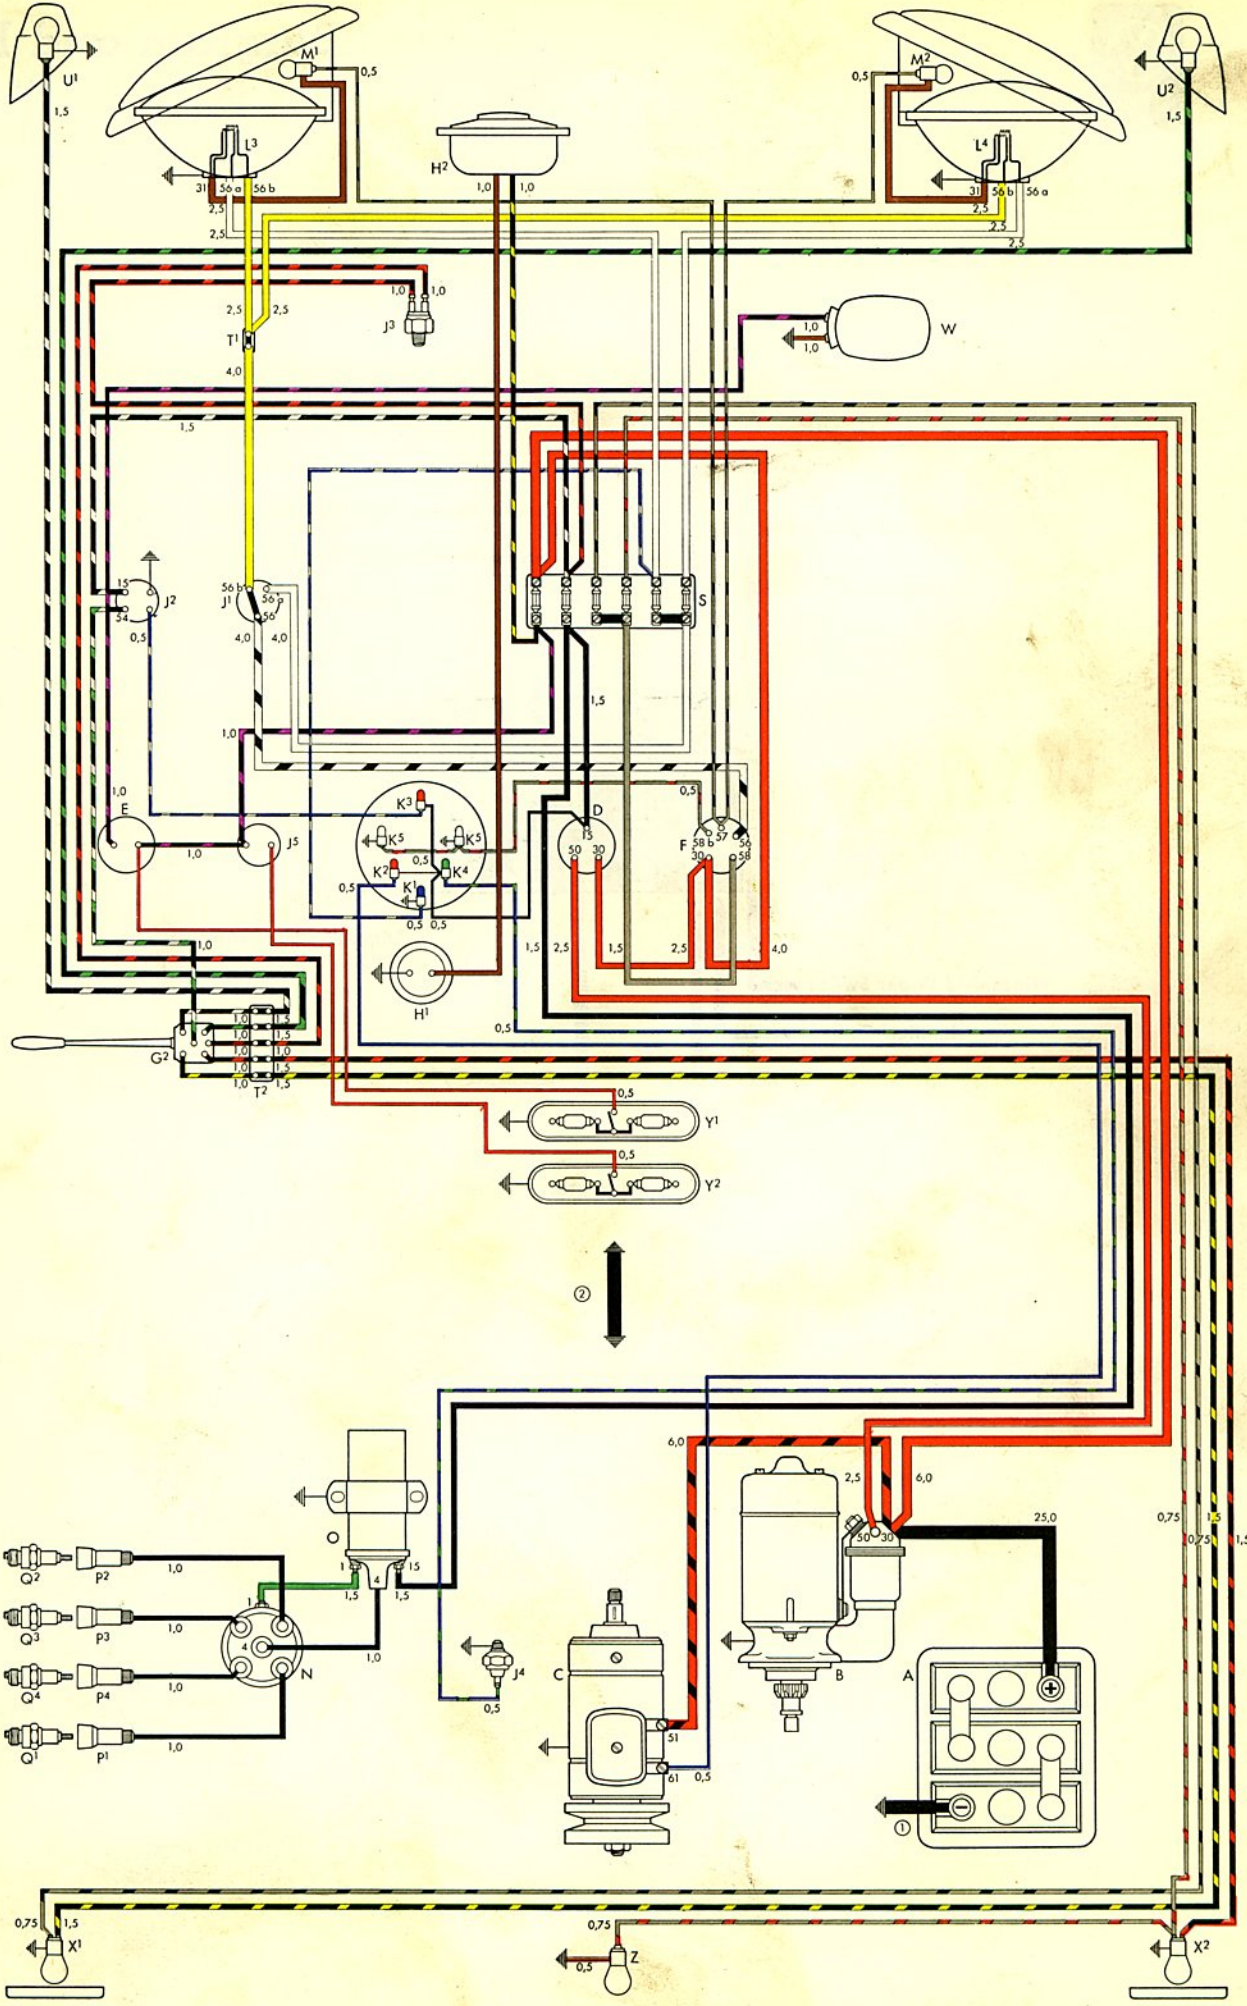

Key to Part Designations


A - Battery
B - Starting Motor
C - Generator
D - Ignition Switch
E - Windshield Wiper Switch
F - Lighting Switch
G² - Direction Indicator Switch
H¹ - Horn Button
H² - Horn
J¹ - Dimmer Switch
J² - Indicator Flasher Relay
J³ - Stop Light Switch
J⁴ - Oil Pressure Switch
J⁵ - Switch for Interior Light
K¹ - Headlamp Warning Light
K² - Generator and Cooling Warning Light
K³ - Direction Indicator Warning Light
K⁴ - Oil Pressure Warning Light
K⁵ - Speedometer Light
L³ - Two-Filament Bulb, left
L⁴ - Two-Filament Bulb, right
M¹ - Parking Light, left

M² - Parking Light, right
N - Ignition Distributor
O - Ignition Coil
P¹ - Spark Plug Connector for Cylinder 1
P² - Spark Plug Connector for Cylinder 2
P³ - Spark Plug Connector for Cylinder 3
P⁴ - Spark Plug Connector for Cylinder 4
Q¹ - Spark Plug for Cylinder 1
Q² - Spark Plug for Cylinder 2
Q³ - Spark Plug for Cylinder 3
Q⁴ - Spark Plug for Cylinder 4
S - Fuse Box
T¹ - Cable Connector single
T² - Cable Connector 5 point
U¹ - Direction Indicator, left front
U² - Direction Indicator, right front
W - Windshield Wiper Motor
X¹ - Stop/Tail/Indicator Light, left
X² - Stop/Tail/Indicator Light, right
Y¹ - Interior Light, front
Y² - Interior Light, rear
Z - License Plate Light

Wiring Diagram and Fuses

U. S. Version

Fuses

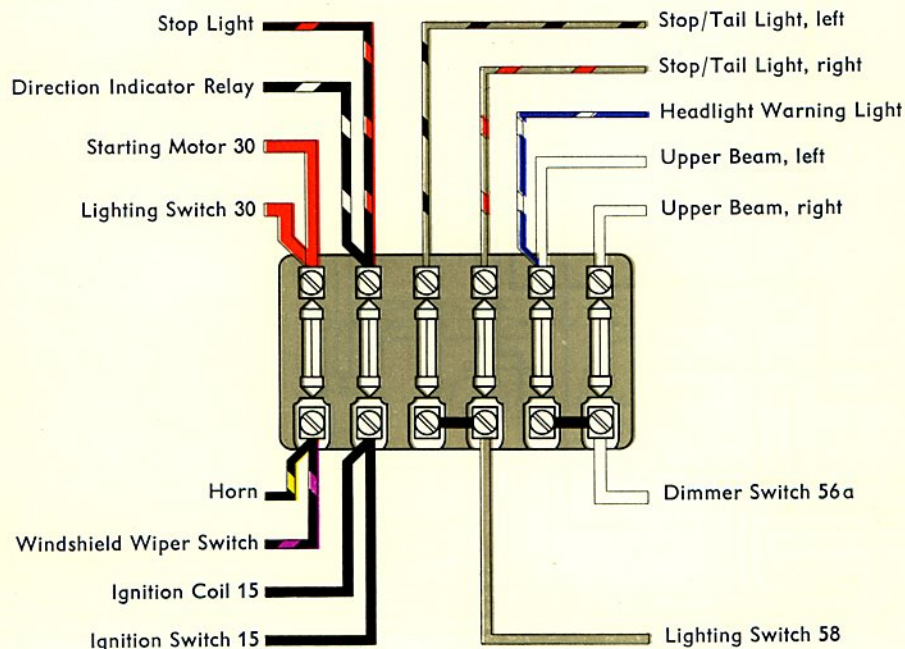

Fuse Box below parcel shelf