


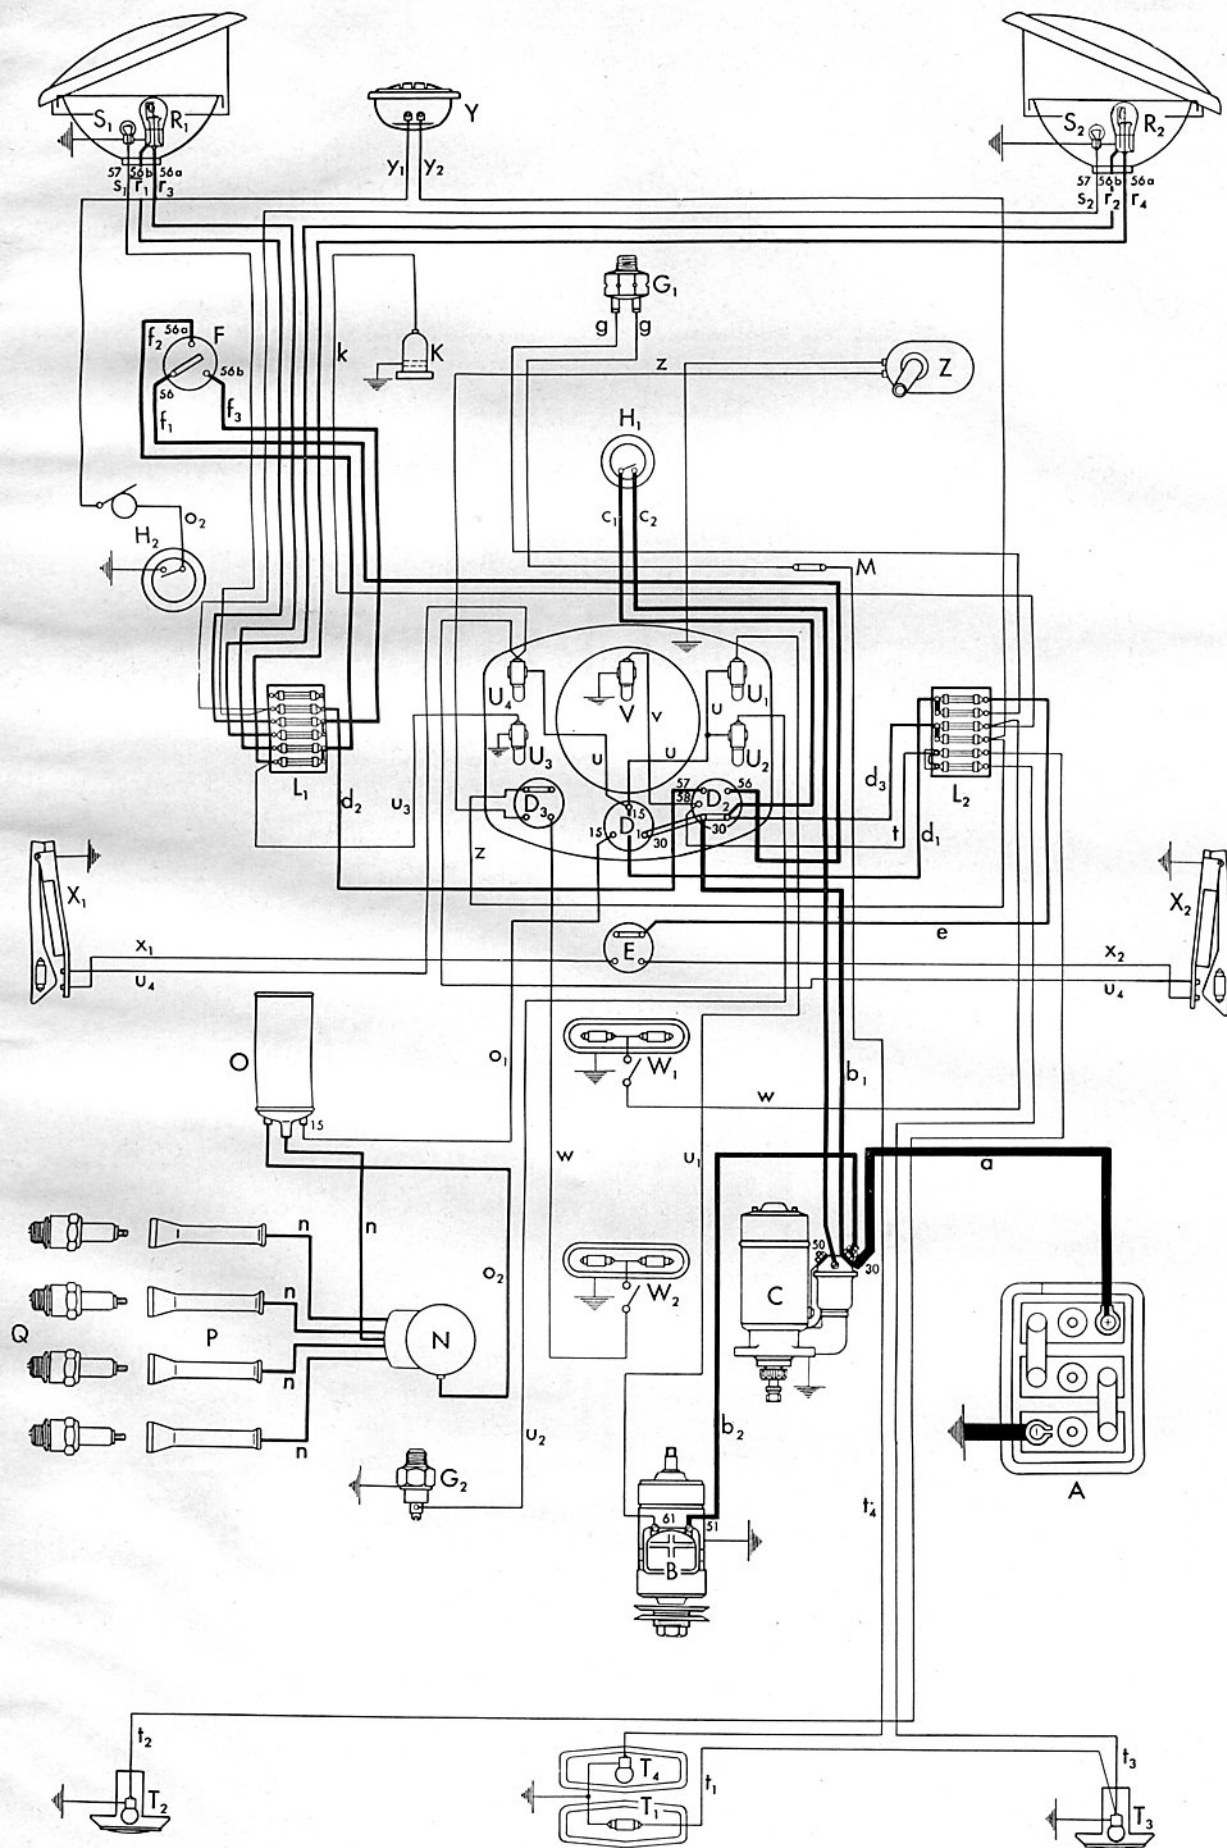


Key to Part Designations

A - Battery B - Generator C - Starting Motor D¹ - Ignition Switch D² - Lighting Switch D³ - Windshield Wiper Switch and Interior Light E - Direction Indicator Switch F - Dimmer Switch G¹ - Stop Light Switch G² - Oil Pressure Switch H¹ - Starter Button H² - Horn Button K - Socket L¹ - Fuse Box at Instrument Board, left L² - Fuse Box at Instrument Board, right M - Connector N - Ignition Distributor O - Ignition Coil P - Spark Plug Connector	Q - Spark Plugs R¹ - Two-Filament Bulb, left R² - Two-Filament Bulb, right S¹ - Parking Light, left S² - Parking Light, right T¹ - License Plate Light T² - Tail Light, left T³ - Tail Light, right T⁴ - Stop Light U¹ - Generator Warning Light U² - Oil Pressure Warning Light U³ - Headlight Warning Light U⁴ - Direction Indicator Warning Light V - Instrument Light Bulb W¹ - Driver's Cab Interior Light W² - Load Space Interior Light X¹ - Direction Indicator, left X² - Direction Indicator, right Y - Horn Z - Windshield Wiper
--	---


Key to Cable Colours

Designation	Colour	Cross Section sq. mm	Designation	Colour	Cross Section sq. mm
a	Black	25.0	r ⁴	White	1.5
b ¹	Red	6.0	s ¹	Black/Grey	0.5
b ²	Red/Black	6.0	s ²	Grey	0.5
c ¹	Red	2.5	t	Grey	0.75
c ²	Red	4.0	t ¹	Grey/Red	0.75
d ¹	Black	1.5	t ²	Black/Grey	0.75
d ²	Grey/Yellow	0.5	t ³	Grey	0.75
d ³	Red/Black	1.0	t ⁴	Black/Grey	1.0
e	Black/White/Green	1.5	u	Black	0.5
f ¹	Black/White	2.5	u ¹	Blue	0.5
f ²	White	2.5	u ²	Blue/Green	0.5
f ³	Yellow	2.5	u ³	Blue/White	0.5
g	Red/Black	0.75	u ⁴	Blue/Red	0.5
k	Red	1.0	v	Black	0.5
n	Black	0.85	w	Grey/Green	0.5
o ¹	Black	0.75	x ¹	Black/White	1.0
o ²	Black	1.5	x ²	Black/Green	1.0
r ¹	Black/Yellow	1.5	y ¹	Brown	1.0
r ²	Yellow	1.5	y ²	Black/Yellow	1.0
r ³	Black/White	1.5	z	Black/Lilac	0.75

Fuses

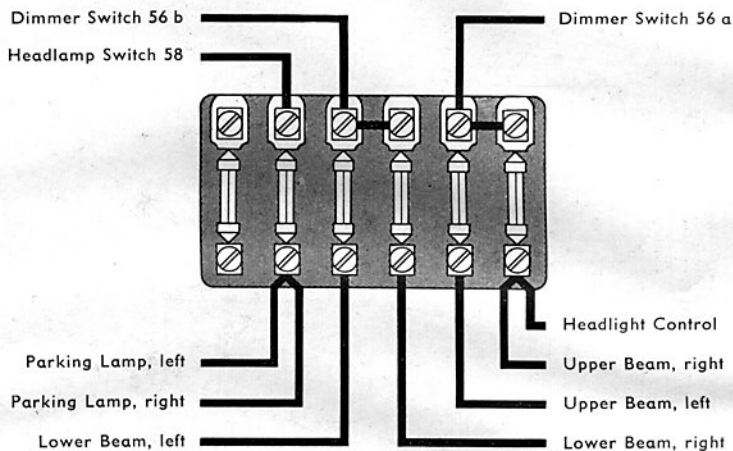

Left Fuse Box

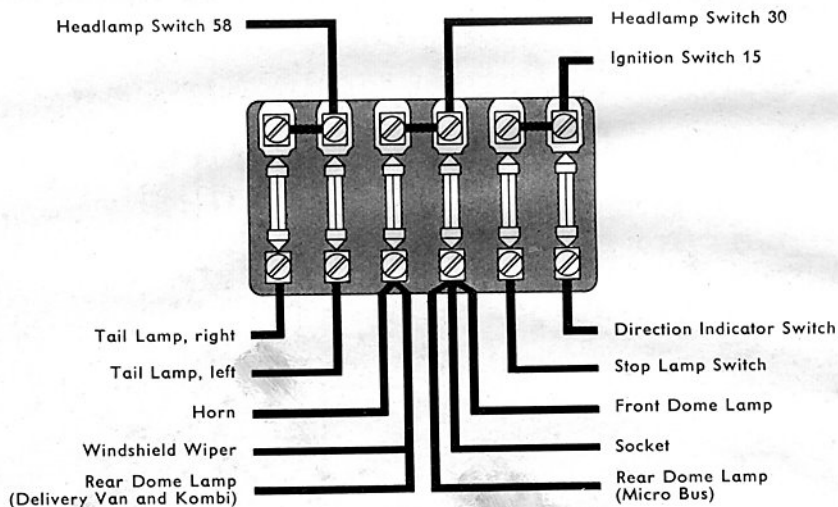

Right Fuse Box